



INSTRUCTIONS AND MAINTENANCE

fontealta
in&out steel concept

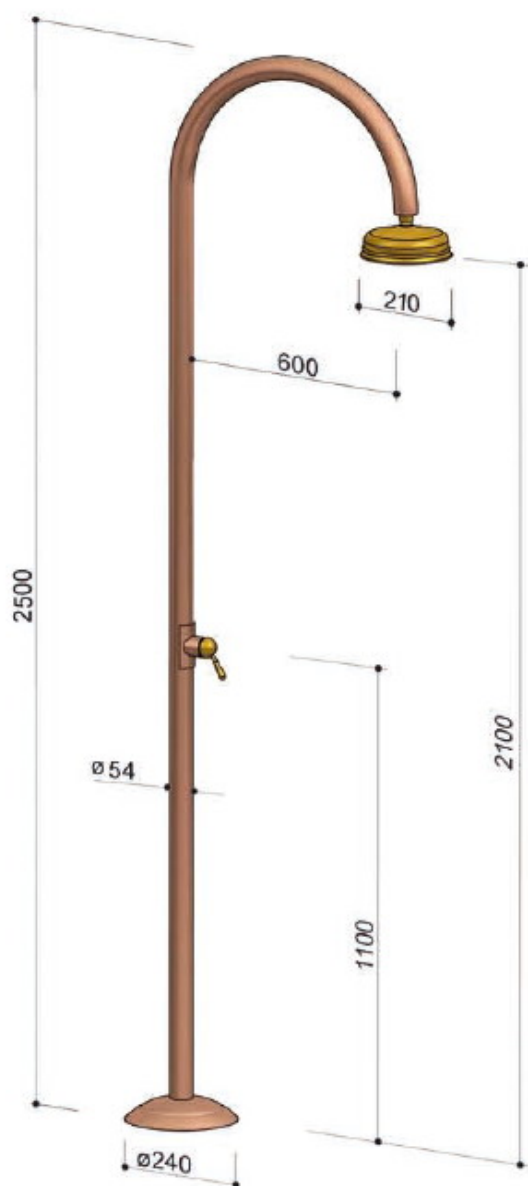

C50 R

Outdoor shower column with
single-lever mixer and
anti-limescale showerhead

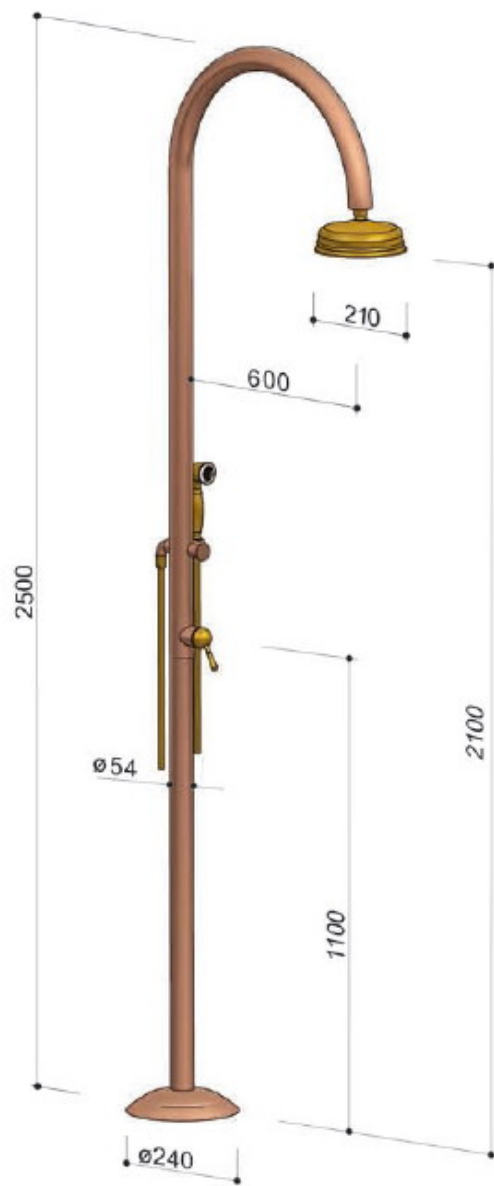

C50 R Extra

Outdoor shower column, with
single-lever mixer, diverter,
handshower, 150 cm flexible
hose and anti-limescale
showerhead

fontealta

is a brand of :

RubINETteria F&F L'Artigiana Sri

Via Libeccio 48/C

1-55049 Viareggio (Lu)


Tel +39 0584 969041 Fax +39 0584 361206

www.fontealta.it info@fontealta.it

PREINSTALLATION


1. Prior to installation, an inspection well equipped with a stop valve shall be built. It should be of appropriate size to allow all required water connections. Together with the stop valve (or upstream) we recommend the installation of a filter. If the shower column is equipped with time-limited self-closing tap, the installation of an upstream filter is strictly required for the acknowledgement of our guarantee.
2. Downstream of the well, install a 6 cm diameter corrugated pipe; take care that the upper edge of the pipe is installed at a minimum distance of 15 cm from the finished floor surface.
3. Install a polyethylene/polypropylene water supply pipe (or a similar material), finished off with a 1/2" male thread.
4. Wash out the supply pipes upstream of the inspection well.


Art. C50 R / C50 R Extra

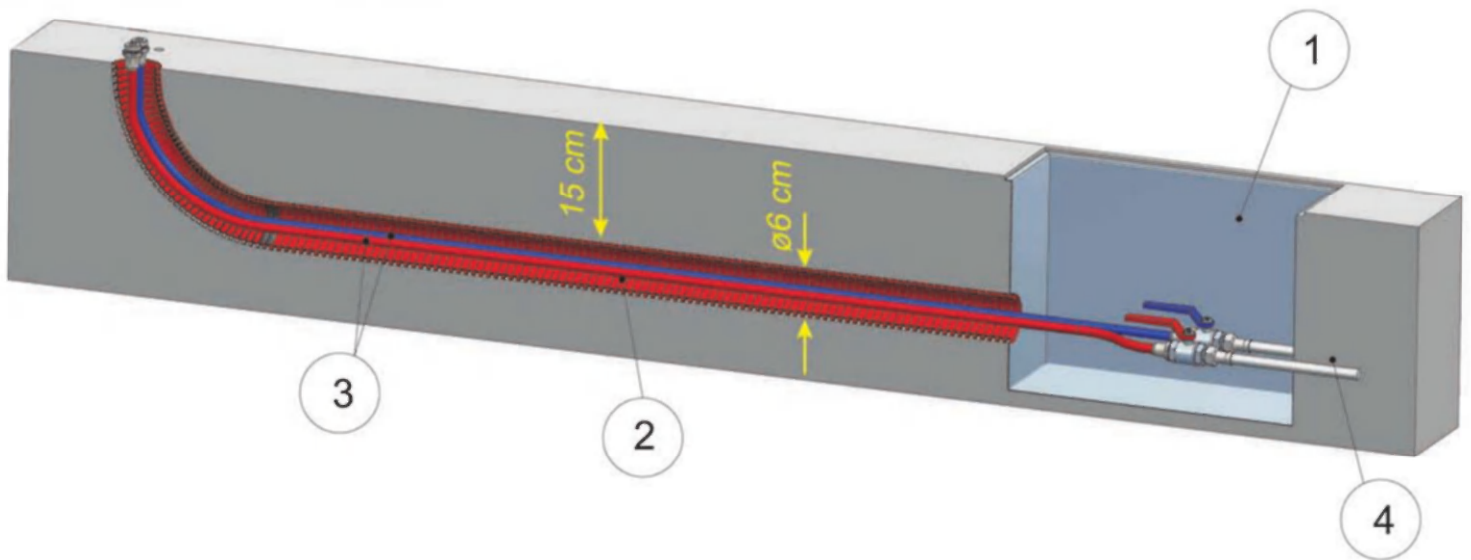


INSTALLATION

1. Place the shower column into position and trace the 3 fixation holes. Remove the column.
2. Drill three 10 mm diameter holes, to a depth of 12 cm.
3. Mount the washers and the blocking nuts on the threaded stems supplied, taking care not to tighten the nuts (leave at half-run).
4. Inject two-component resin, starting from the bottom of the holes. Place the column in position.
5. Insert the threaded stems inside the holes, rotating them in order to allow the resin to fill the holes.
6. Remove the excess resin and clean. Wait for resin to dry up, following the manufacturer instructions.
7. Unscrew the nut and the washer. Remove the column.

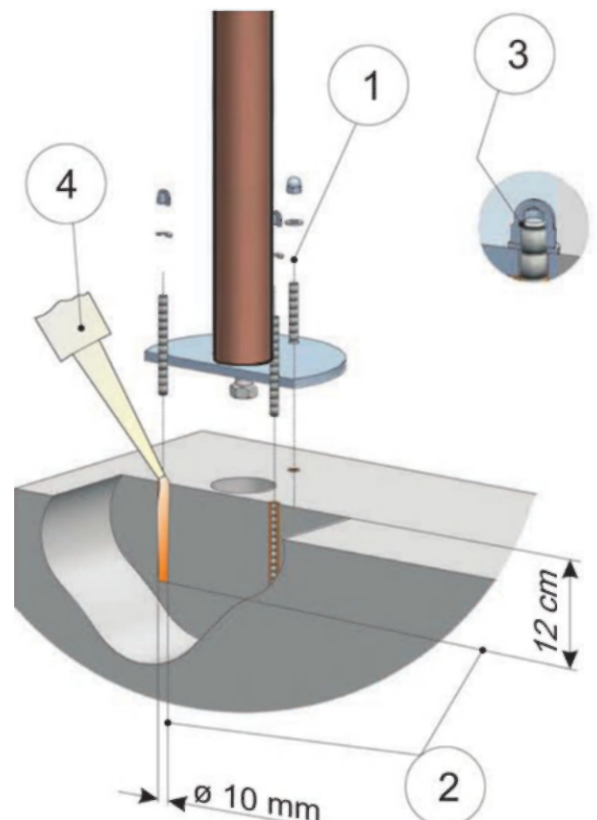

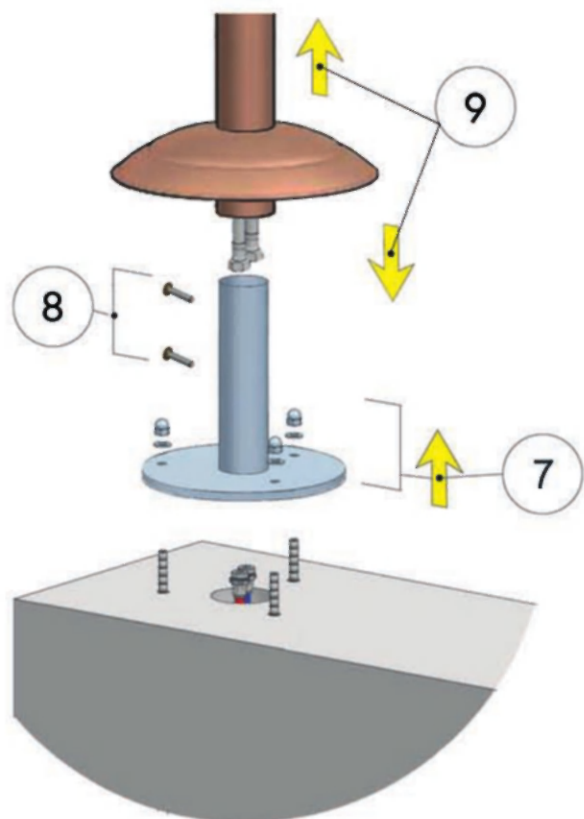

8. Unscrew and remove screws between steel pedestal and copper column
9. Remove steel pedestal and insert escutcheon. Place the steel pedestal into the copper column and tighten screws
10. Connect the supply pipe to the W loose nut of flexible pipe
11. Slide the supply pipe into the corrugated pipe.
12. Connect the end of supply pipe to the stop valve installed inside in the inspection well.
13. Check the static seal, with tap/mixer in position of closed water.
14. Place the column onto the threaded stems. Insert washers on stems and tighten the blocking nuts using a 13 mm wrench. Check the column uprightness using a level: in case of misalignment, loose the blocking nuts and insert thicknesses between the floor and the column base flange.
15. Install the accessories supplied separately (showerhead for all versions; flexible and handshower for Mix Extra version; foot-rinse tap and shower if supplied).

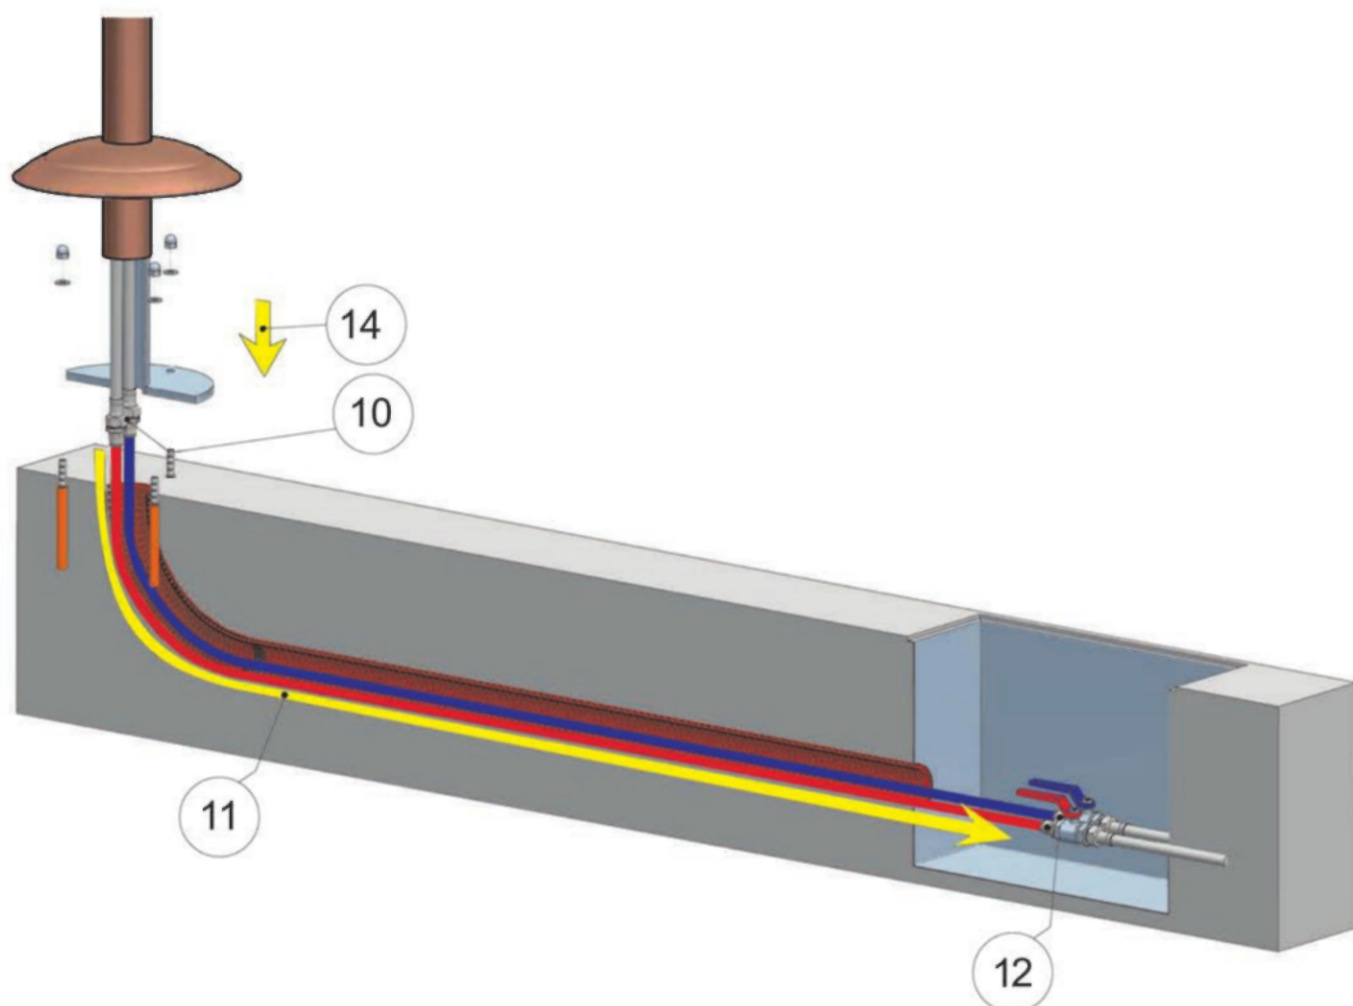

MAINTENANCE AND CLEANING


DEMOUNTING OF EXTERNAL PARTS (FOR SEASONAL USE)

In case of long term non-use (typically: use limited to summer season only), we recommend to remove the entire shower column, demounting it in reverse order to the 'Installation' chapter (page up). In case this would not be possible, we suggest to:

1. Remove all demountable parts: showerhead, handshower and flexible hose.
2. Close stop valve inside the inspection well (see 'Preinstallation' chapter, two pages up).
3. Unscrew supply pipe from stop valve.
4. Open tap/mixer until complete emptying of the shower column.

In case of aggressive environmental conditions (especially: exposure to high salinity or frost) we also recommend to demount all tap/mixer removable parts, including cartridge. Please refer to the drawings below for the demounting sequence.

Note: when the mixer trim parts are re-installed, we recommend to tighten the blocking nut of mixer cartridge using a dynamometric key, torque 0,8 kgm.

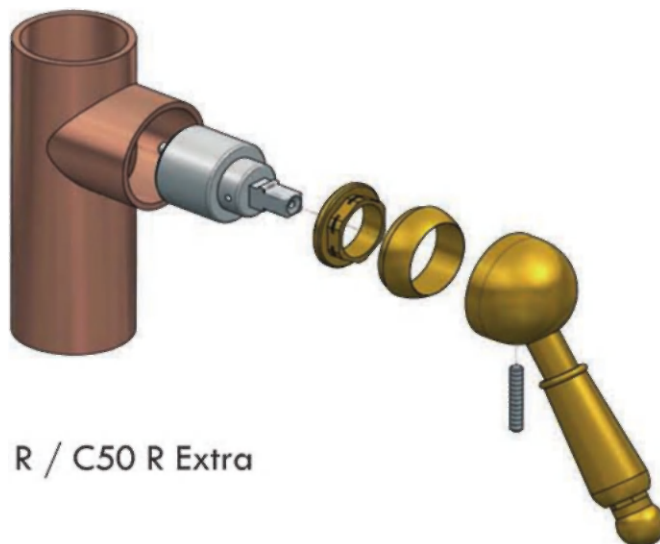

Art. C50 R / C50 R Extra

PERIODICAL MAINTENANCE

Shower columns C50 R and C50 R Extra have not been treated with any chemical product or varnish, in order to let copper and brass surfaces oxidize.

In case the user wishes to keep the original brightness of brass surface, we suggest to clean it periodically using metal polishers

fontealta

is a brand of :

RubINETTERIA F&F L'Artigiana Sri

Via Libeccio 48/C

1-55049 Viareggio (Lu)

Tel +39 0584 969041 Fax +39 0584 361 206

www.fontealta.it info@fontealta.it