


INSTRUCTIONS AND MAINTENANCE

fontealta
in&out steel concept

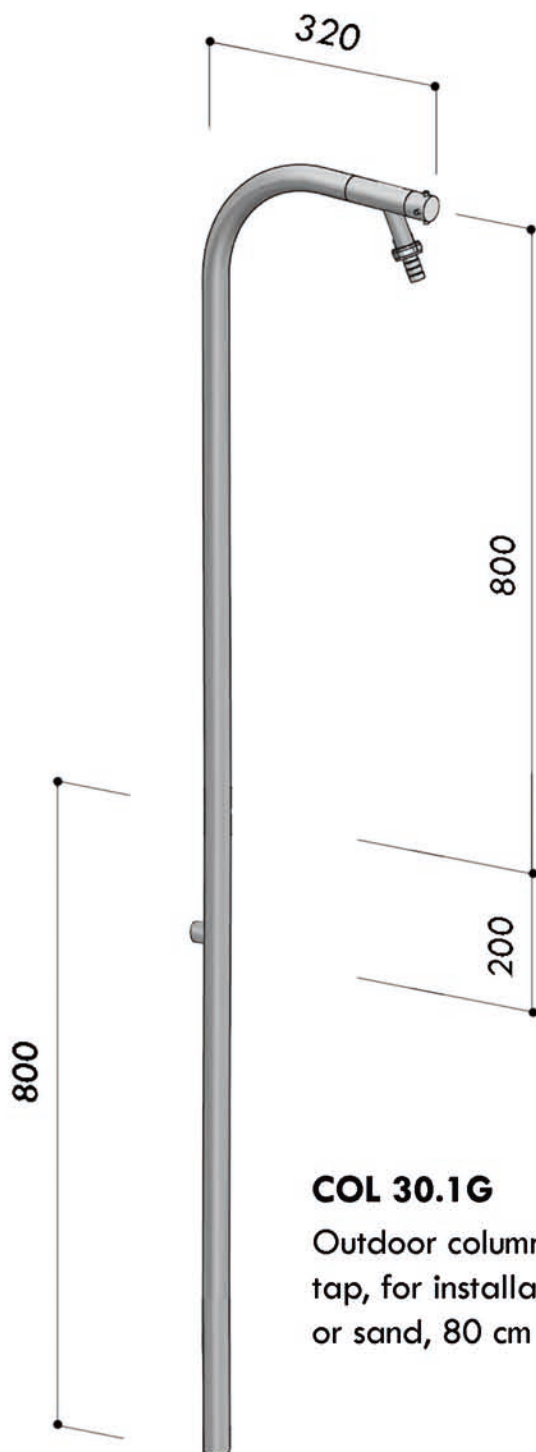

COL 30.1G

Outdoor column with garden
tap, for installation on ground
or sand, 80 cm depth

All columns Spring Col30 are made of stainless steel Aisi 316

fontealta

is a brand of :

Rubinetteria F&F L'Artigiana Srl

Via Libeccio 48/C

I-55049 Viareggio (Lu)

Tel +39 0584 969041 Fax +39 0584 361206


www.fontealta.it info@fontealta.it

PREINSTALLATION

1. Prior to installation, an inspection well equipped with a stop valve shall be built. It should be of appropriate size to allow all required water connections. Together with the stop valve (or upstream) we recommend the installation of a filter. If the shower column is equipped with time-limited self-closing tap, the installation of an upstream filter is strictly required for the acknowledgement of our guarantee.
2. Downstream of the well, install a 6 cm diameter corrugated pipe; take care that the center of the pipe is installed at a distance of 20 cm from the ground level
3. Install a polyethylene/polypropylene water supply pipe (or a similar material), finished off with a 1/2" male thread
4. Wash out the supply pipes upstream of the inspection well
5. Dig a hole in the ground wide enough to allow the connection between column and water supply.


Note: The water inlet coupling is located on the column stem on the opposite side of the tap

Art. COL 30.1G

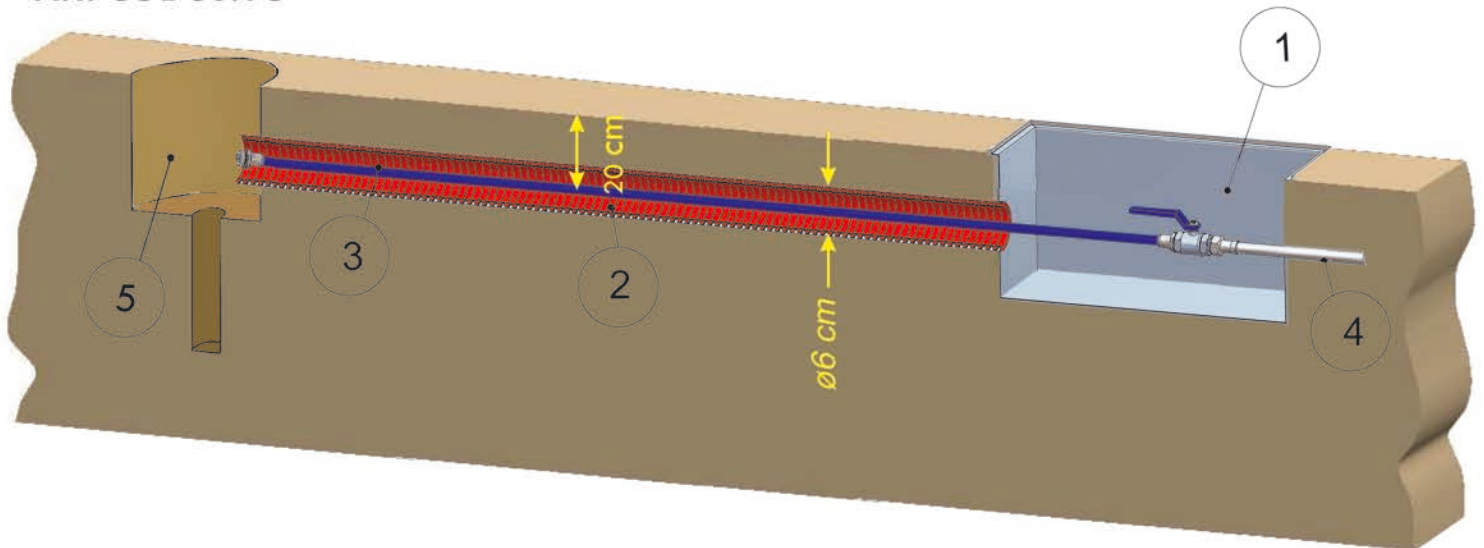

INSTALLATION

1. Connect water supply to the ½"F connection on the column stem, at approximately 200 mm from the ground level
2. Slide the supply pipe into the corrugated pipe.
3. Connect the end of supply pipe to the stop valve installed inside in the inspection well.
4. Install the stop tap by tightening the two M5 dowels, using the Allen screw supplied, (see drawing on following page)
5. Check the static seal, with tap in position of closed water.
6. Place the column on ground, implant it and cover. We recommend to check the vertical alignment using a bubble level

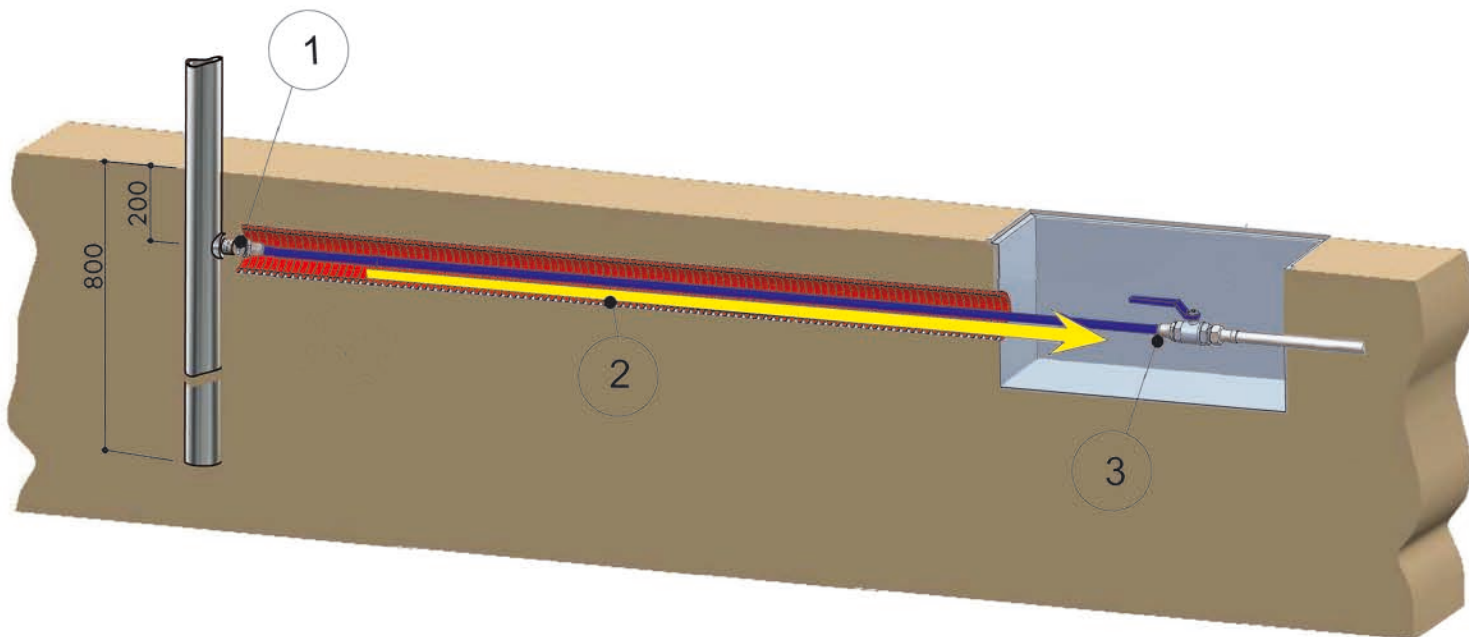


MAINTENANCE AND CLEANING

DEMOUNTING OF EXTERNAL PARTS (FOR SEASONAL USE)

In case of long term non-use (typically: use limited to summer season only), we recommend to remove the entire column, demounting it in reverse order to the 'Installation' chapter (page up). In case this would not be possible, we suggest to:

1. Close stop valve inside the inspection well (see 'Preinstallation' chapter, two pages up).
2. Unscrew supply pipe from stop valve.
3. Open stop tap until complete emptying of the shower column.

Please refer to the drawings below for the demounting sequence.

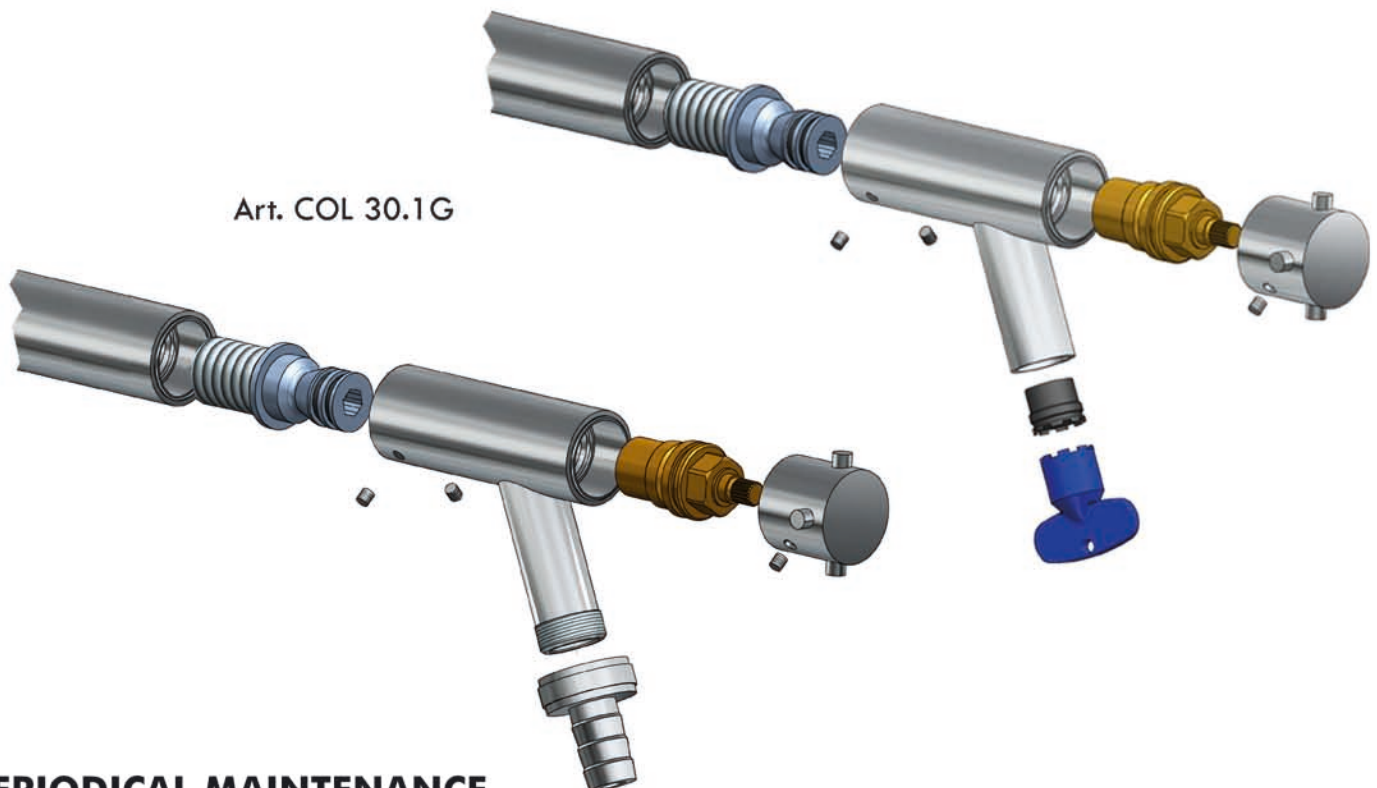

PERIODICAL MAINTENANCE

- Wash frequently with freshwater in order to maintain a shiny surface, if possible using high-pressure water jetting.
- Remove periodically any visible saline deposit, lime scale, oxidation spot; clean carefully all cavities, threaded couplings, screw heads etc. Use only smooth clothes, do not use rough sponges or abrasives.
- Polish all column surface with anti-oxidizing products at least once per year, following the manufacturer instructions.

In case of aggressive environmental conditions (especially: exposure to high salinity) we recommend to polish the entire shower column surface at least three times per year or three times during the seasonal use (beginning, half, end of summer)

fontealta

is a brand of :

RubINETTERIA F&F L'Artigiana Srl

Via Libeccio 48/C

I-55049 Viareggio (Lu)

Tel +39 0584 969041 Fax +39 0584 361206

www.fontealta.it info@fontealta.it